# Shelly Pro 2PM v.1



#### Shelly Pro 2PM v.1 is a modification of Shelly Pro 2PM (SPSW-002PE16EU)

Shelly Pro 2PM v.0 is now obsolete and out of sale.

Download Shelly Pro 2PM multi-language printed user manual.

Differences with Shelly Pro 2PM v.0 are marked by the ≠ symbol in the text below.

#### Main changes:

- Power supply: no more 12 VDC option.
- Connectors: 3-terminal connectors are replaced by 2-terminal ones.
- PCBs: relay 2-layer PCBs are replaced by 4-layer ones for better thermal performance.
- LAN: improved high voltage electrical distances.
- Plastics shell: improved dielectric performance.

## Device identification (≠)

Device name: Shelly Pro 2PM v.1

• Device model: SPSW-202PE16EU

• Device SSID: ShellyPro2PM-XXXXXX

# **Short description**

Shelly Pro 2PM is a DIN rail mountable 2-channel smart switch with power measurement capabilities. Enhanced with all the gen2 firmware flexibility and LAN connectivity, it provides professional integrators with many more options for end customer solutions. It can work standalone in a local Wi-Fi network or it can also be operated through cloud home automation services.

Shelly Pro 2PM can be accessed, controlled and monitored remotely from any place where the User has internet connectivity, as long as the device is connected to a Wi-Fi router and the Internet.

Shelly Pro 2PM has an embedded Web Interface which can be used to monitor and control the device, as well as adjust its settings.


### Main applications

- Residential
- MDU (Multi Dwelling Units apartments, condominiums, hotels, etc.)
- Light commercial (small office buildings, small retail/restaurant/gas station, etc.)
- Government/municipal
- University/college

# Integrations

- Google
- Alexa
- · Samsung SmartThings

# Simplified internal schematics (≠)

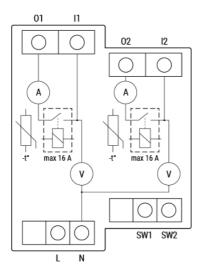

## **Device electrical interfaces**

#### Inputs

- 2 switch/button inputs on screw terminals: SW1 and SW2
- 2 power supply inputs on screw terminals: 1 N and 1 L
- 2 relay inputs: **I1**, **I2**

### Outputs

• 2 relay outputs: **01**, **02** 


# **Ethernet port**

• 1 RJ45 connector

**<u>ACAUTION!</u>** Plug in or unplug the LAN cable only when the Device is powered off! The LAN cable connector must not be metallic in the parts touched by the user to plug in or unplug the cable.

### Add-on interface

· Shelly proprietary serial interface

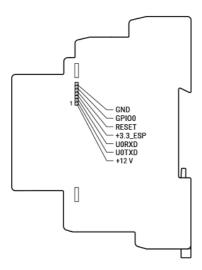

**△CAUTION!** High voltage on the add-on interface when the Device is powered!

## Connectivity

- Wi-Fi
- Ethernet
- Bluetooth

### Safety features

- · Overheating protection
- Overvoltage protection
- · Overcurrent protection
- Overpower protection

## Supported load types

- Resistive (incandescent bulbs, heating devices)
- Capacitive (capacitor banks, electronic equipment, motor start capacitors)
- Inductive with RC Snubber (LED light drivers, transformers, fans, refrigerators, air-conditioners)

#### User interface

### Inputs

- One tactile dome button
  - Press and hold 5 sec to reboot.
  - Press and hold 10 sec to factory reset.

#### Outputs

- LED indication
  - Power (red): Red light indicator will be on if power supply is connected.
  - Wi-Fi (varies):
    - Blue light indicator will be on if in AP mode.
    - Red light indicator will be on if in STA mode and not connected to a Wi-Fi network.
    - Yellow light indicator will be on if in STA mode and connected to a Wi-Fi network. Not connected to Shelly Cloud or Shelly Cloud disabled.


- Green light indicator will be on if in STA mode and connected to a Wi-Fi network and to the Shelly
  Cloud
- $\bullet \quad \text{The light indicator will be flashing Red/Blue if OTA update is in progress}.\\$
- LAN (green): Green light indicator will be on if LAN is connected.
- Out 1 (red): Red light indicator will be on if the Output 1 relay is closed.
- Out 2 (red): Red light indicator will be on if the Output 2 relay is closed.

# Specifications (≠)

Туре	Value		
Physical			
Size (HxWxD):	94x19x69 ±0.5 mm / 3.70x0.75x2.71 ±0.02 in		
Weight:			
Mounting:	DIN rail		
Screw terminals max torque:	0.4 Nm / 3.54 lbin		
Conductor cross section:	0.5 to 2.5 mm² / 20 to 14 AWG (green connectors) 0.5 to 1.5 mm² / 20 to 16 AWG (blue connectors)		
Conductor stripped length:	6 to 7 mm / 0.24 to 0.28 in (green connector) 5 to 6 mm / 0.20 to 0.24 in (blue connectors)		
Shell material:	Plastic		
Color:	Black		
Environmental			
Ambient temperature:	-20 °C to 40 °C / -5 °F to 105 °F		
Humidity	30 % to 70 % RH		
Max. altitude	2000 m / 6562 ft		
Electrical			
Power supply voltage AC:	110 - 240 V		
Power supply voltage DC:	N/A		
Power consumption:	< 3 W		
Neutral not needed:	No		
Output circuits ratings			
Max switching voltage AC:	240 V		
Max switching voltage DC:	N/A		
Max switching current AC:	16 A per channel, 25 A total		
Max switching current DC:	N/A		
Sensors, meters			
Voltmeter (AC)	Yes		
Ammeter (AC)	Yes		
Internal-temperature sensor:	Yes		

Radio				
RF band:	2400 - 2495 MHz			
Max. RF power:	<20 dBm			
Wi-Fi protocol:	802.11 b/g/n			
Wi-Fi Range:	Up to 30 m / 100 ft indoors and 50 m / 160 ft outdoors (Depends on local conditions)			
Bluetooth Protocol:	4.2			
Bluetooth Range:	Up to 10 m / 33 ft indoors and 30 m / 100 ft outdoors (Depends on local conditions)			
мси				
CPU:	ESP32-D0WDQ6			
Flash:	8 MB			
Firmware capabilities				
Schedules:	20			
Webhooks (URL actions):	20 with 5 URLs per hook			
Scripting:	Yes			
MQTT:	Yes			
CoAP:	No			

# Basic wiring diagram (≠)

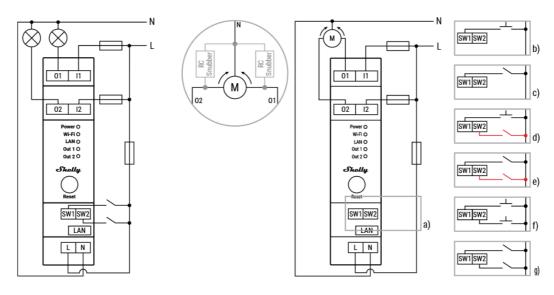

### Switch/button Configurations in Cover mode

- a) Detached mode
- b) Single button mode
- c) Single switch mode
- d) Single button and safety switch mode
- e) Single switch and safety switch mode
- f) Dual button mode
- g) Dual switch mode

_	

Terminals		Wires	
11, 12	Load circuit input terminals	L	Live (110-240 V) wire
01, 02	Load circuit output terminals	N	Neutral wire
SW1, SW2	Switch/button input terminals		
L	Live (110-240 V) terminal		
N	Neutral terminal		
LAN	Local Area Network RJ 45 connector		

### **Troubleshooting**

...

### Web Interface guide

Read the Shelly Pro 2PM web interface guide

### Components and APIs

- This device
- All Shelly devices and services

## Printed user guide

- Shelly Pro 2PM multilingual printed user and safety guide.pdf
- Ръководство за употреба и безопасност

# Compliance

- Shelly Pro 2PM multilingual EU declaration of conformity 2025-07-30.pdf
- Shelly Pro 2PM UK PSTI ACT Statement of compliance.pdf
- Shelly PRO 1PM&2PM AU NZ certificate for Suitability.pdf



## Installation guides

- Using Shelly Pro 2/2PM V1 with multiple switches to control dual lights
- Using Shelly Pro 2/2PM V1 with multiple buttons to control dual lights

