Manual


V1.1 - April 2022

DRIVER DRIVER

DMX SOFT DIM

DIM



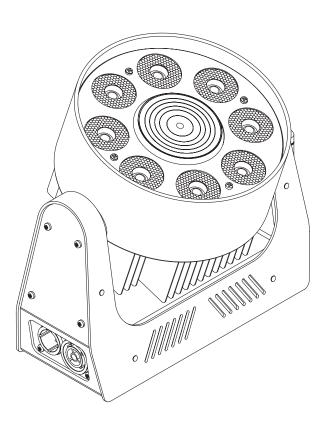

Index	2
Safety information	2
Content	2
Technical	3
Specifications	3

Installation	4
Honeycomb assembly	5
Programming	6
Factory setting table	6
Programming table	_7
List of Symbols	8

SAFETY INFORMATION











Disconnect the power supply before installing or maintaining

Make sure all connectors are connected properly


Use a source of AC power that complies to local electrical codes


Block access below the work area when maintaining the unit


Don't modify or install genuine parts on this product Don't install in a flammable or explosive area

Warning! Some surfaces can be hot

CONTENT

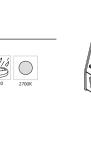

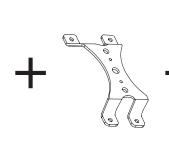

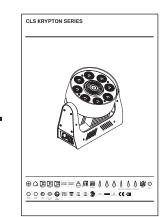









TECHNICAL


INSTALLATION

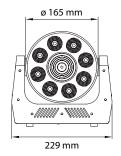


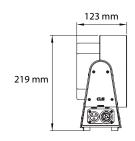

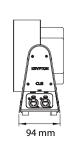


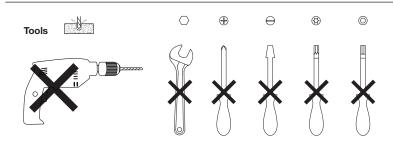

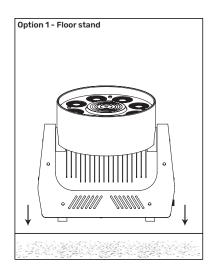

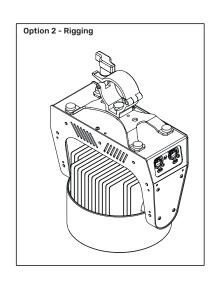

Max. 6 Krypton's switched at once with C-16 fuse.
CLS advises the use of inrush current limiters to switch more fixtures at once.

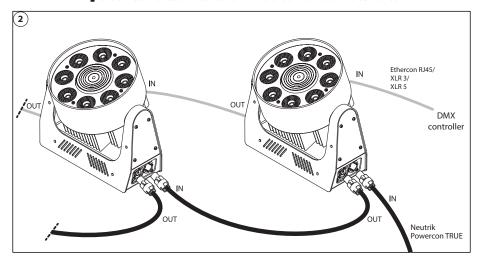

SPECIFICATIONS

LED: High Power LEDs

Available colours: CRI≈80: 2700K, 3000K, 4000K

CRI≈90: 2700K, 3000K, 4000K

Colour changing: RGB

Lenses: White Light module: 24°, 35° or 60°

RGB module: 10°, 25° or 35°

Power supply: 100 ~ 240 VAC Power consumption: Max. 93 Watt

Connection: Power: Neutrik Powercon TRUE

DMX: Neutrik Ethercon RJ45, XLR3 or XLR5

Housing: Anodised aluminium black or white coated

Weight: 2500 gr IP value: IP20

Measurements: 219 x 229 x 94 mm (hxwxd)


Ambient temperature: -10° C till +40° C





3


HONEYCOMB ASSEMBLY

PROGRAMMING

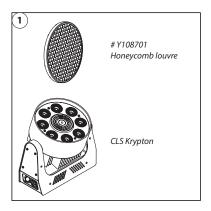

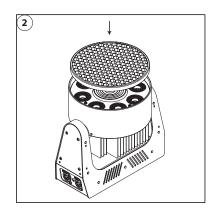

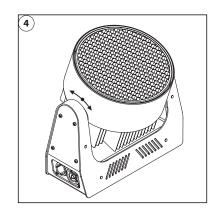


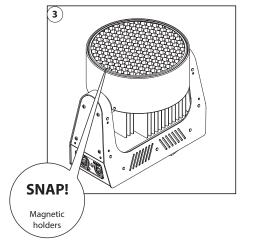



All settings can be configured via DMX. Settings can be configured at once or separately. When one or a couple settings needs to be changed just leave all other setting values zero. This keeps those settings unchanged. Please check the table for more information.

Always use a DMX controller with digital interface. If not available, you can purchase the CLS D-ta DMX addresser unit (#122200).

First make sure to set the DATA on the DMX controller. To program the setting into the LED fixture follow the next steps.

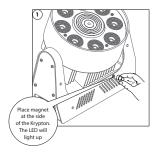

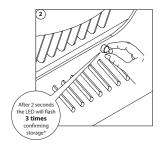

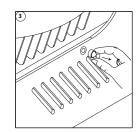

^{*} If the LEDs flashes 10 times, something went wrong. Please try again. If the problem continues to occur, please contact your local sales distributor.

FACTORY SETTING TABLE

	FACTORY SETTING TABLE												
Row #	Fixture type	Address	Static behavior	Soft dim	Master	Output 1 patch	Output 2 patch	Output 3 patch	Output 4 patch	Static output 1	Static output 2	Static output 3	Static output 4
1	RGBW	1	1	Off	Off	1 (R)	2 (G)	3 (B)	4 (W)	255	255	255	255
2	RGBA	1	1	Off	Off	1 (R)	2 (G)	3 (B)	4 (A)	255	255	255	255
3	AWB	1	1	Off	Off	3 (B)	2 (W)	1 (A)	2 (W)	255	255	255	255
4	1800-3000K	1	1	Off	Off	1 (18)	2 (30)	1(18)	2(30)	255	255	255	255
5	1800-4000K	1	1	Off	Off	1 (18)	2 (40)	1(18)	2(40)	255	255	255	255
6	2700-5000K	1	1	Off	Off	1 (27)	2 (50)	1(27)	2(50)	255	255	255	255
7	Single colour	1	1	Off	Off	1	1	1	1	255	255	255	255

2022 CLS-LED BV. All rights reserved. Information subject to change without notice, CLS-LED BV and all affiliated companies disclaim liability for injury, damage direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this manual. No part of this manual may be reproduced, in any form or by any means, without permission in writing from CLS-LED BV. Other legal information can be found in our General conditions, found on the back of your CLS-LED BV invoice, inside the CLS catalogue or on our website www.cls-led.com/General-Terms.pdf





5

PROGRAMMING TABLE

LIST OF SYMBOLS

PROGRAMMING TABLE								
DMX	Function	Data	Parameters	Description				
	Set address	0	0 = no change	Use this DMX channel to set address from 001 to				
CH1	001 to 255	1255	DMX address = 1255	255. The configured DMX address is called "n"				
	Set address	0	no change	Use this DMX channel to set address from 256 to				
CH2	256 to 508	1255	DMX address = 256508	508. The configured DMX address is called "n"				
	200 10 000	0	no change	See the compared print address is called it				
	Static	1	last DMX value	If no DMX is present the fixture will respond like				
CH3	behavior	2	output off	set in this function.				
	bellavioi	3	load static values					
		0	no change	Dynamic soft dim. When activated an extra DMX				
CH4	Soft dim	1	off	channel behind the colours/master controls the				
СП4	Soit aim	2	on	soft dim reaction.				
		0	no change	If master is first channel is selected the channel				
CH5	Master	1	no master used	will be DMX channel "n". If master is last channel				
	control	2	master is first channel	is selected the channel will be "n+x"				
		3	master is last channel	("x" is calculated in the output patch).				
		0	no change	Each output channel can be patched to respond				
	Output 1	1	DMX channel n	to the desired DMX channel. This enables the				
CH6		2	DMX channel n+1	user to mix up the colours according to the				
	pateri	3	DMX channel n+2	controller that is used.				
		4	DMX channel n+3					
		0	no change	Example: all outputs are patched as 1				
	0	1	DMX channel n	All outputs will be controlled by DMX channel				
CH7	Output 2	2	DMX channel n+1	"n". If master is used total DMX channels will be 2				
	patch	3	DMX channel n+2	otherwise it uses 1 channel ("x" = 1).				
		4	DMX channel n+3					
		0	no change	Example: output 1&2 are patched as 1 and 3&4				
		1	DMX channel n	are patched as 2				
CH8	Output 3	2	DMX channel n+1	Output 1 & 2 will be controlled by DMX channel				
	patch	3	DMX channel n+2	"n".				
		4	DMX channel n+3	Output 3 & 4 will be controlled by DMX channel				
	Output 4 patch	0	no change	"n+1".				
		1	DMX channel n	If master is used total DMX channels will be 3				
CH9		2	DMX channel n+1	otherwise it uses 2 channels ("x" = 2).				
Citis		3	DMX channel n+2					
		4	DMX channel n+3					
	Static output	0	no change	For house to be a selected as				
CH10		1	output off	Each output channel can be set to a static				
CHIO	1	2255	intensity 2255	intensity.				
	Static output	0						
CUI		1	no change	If no DMX is present and Static behavior is set to				
CH11	2		output off	"load static values". The outputs will be set to the				
		2255	intensity 2255	configured intensity values.				
	Static output 3	0	no change					
CH12		1	output off					
		2255	intensity 2255					
	Static output	0	no change					
CH13	4	1	output off					
		2255	intensity 2255					
	Load default	0	no change	This function resets all settings to the Factory				
CH14	settings	x	Load Factory settings. X is row	setting. Check Factory setting table.				
	Jettings	_ ^	number factory setting table.	Setting. Check Factory Setting table.				

7

